

Chapter 1 . Introduction



[feature]

1 . 1 Distinctions

- (1) Variable Display Devices
 - High-Resolution, High-Brightness Color
 - TFT(12.1", 10.4", 5.5"), STN Mono LCD(5.7", Black & White, Blue)
 - STN Color LCD(5.7", 7.5", 10.4")
- (2) High speed 32bit RISC CPU(ARM processor)
- (3) Front Water & Dust Proof : IP65F
- (4) Ultra Slim Design for Panel Mounting
- (5) Serial Communication Port and Parallel Print Port
- (6) Resistive Matrix/Analog Touch Key
- (7) Flash Memory for Screen Saving(Max. 4M)
- (8) High speed graphic Controller
- (9) Downloadable Operating System Software and Character Font Data
- (10) Graphics and Tags for Dynamic User Interface
- (11) Various Language Support such as Korean, Chinese, English, Japanese, etc
- (12) Many Kinds of Controller Communication Drivers
- (13) Windows-Based HMI System Design Software Tool
- (14) Controller Communication Diagnosis Mode : Protocol Analyzer Function
- (15) Recipe Function for Data or Parameter Batch Input
- (16) Data Logging


- (17) Usable inner memory of System buffer
- (18) Direct/Indirect addressing to PLC or controller
- (19) Upload function(Screen/Logging/Recipe data)
- (20) All windows fonts are usable to input

1.2 S/W's Distinctions

This is software for drawing and transmission, and is software performs programming and debugging.

This S/W is designed to operate on IBM compatible PC


- (1) Windows based Software : Windows 95/98/Me/NT/2000/XP
- (2) Project Management for Integrated Environment
- (3) Object Oriented Graphics and Dynamic Tags Editor
- (4) Downloadable Operating System Software and Character Font Data for System Upgrade
- (5) Easy to use Graphic Object and Tag Tool Bar
- (6) Viewable Screen Thumbnail
- (7) Automatic Screen Saving
- (8) Enlargement of Screen for Detail Graphic Design (100%, 200%, 300%)
- (9) Printing Tag List as Microsoft Excel Worksheet format
- (10) Screen Components Information Windows : Diagrams, Tags and Selected objects List
- (11) Internal Communication Memory Area : System Buffers
- (12) Direct/Indirect Device Memory Assignment
- (13) System Components Library Support
- (14) Simulation
- (15) Transparent text support
- (16) Transparent bitmap support
- (17) All fonts of Windows support
- (18) About movement & resizing, Usage of Arrow keys is possible

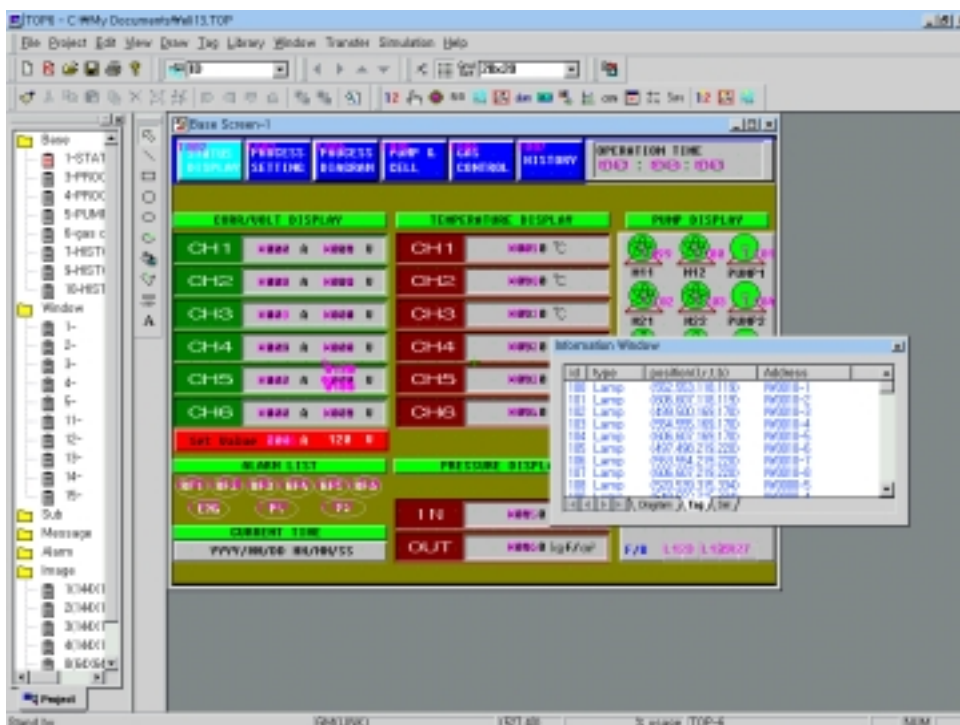

[Screen shot of S/W]


1.3 Connection to Panel

After completion of programming, click 'Transmit'. All composed screen files are compiled into one file and saved. It transmits compiled file through RS-232C port.

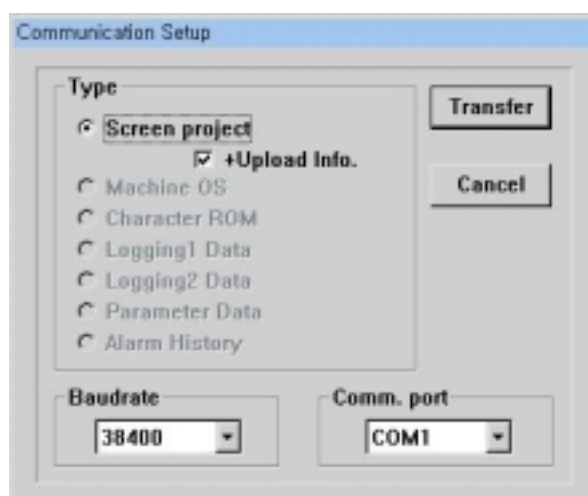


1.3.1 RS-232C


Standard Connector pin between PC and Panel is RS-232C

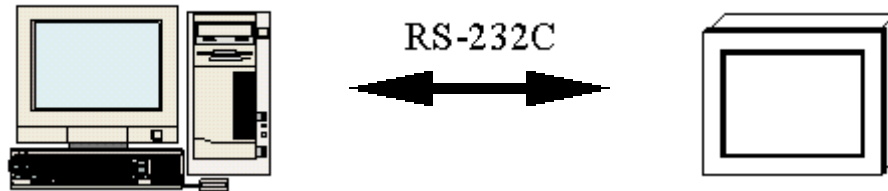

(1) Connection between Panel's 6pin port and PC's 9pin port

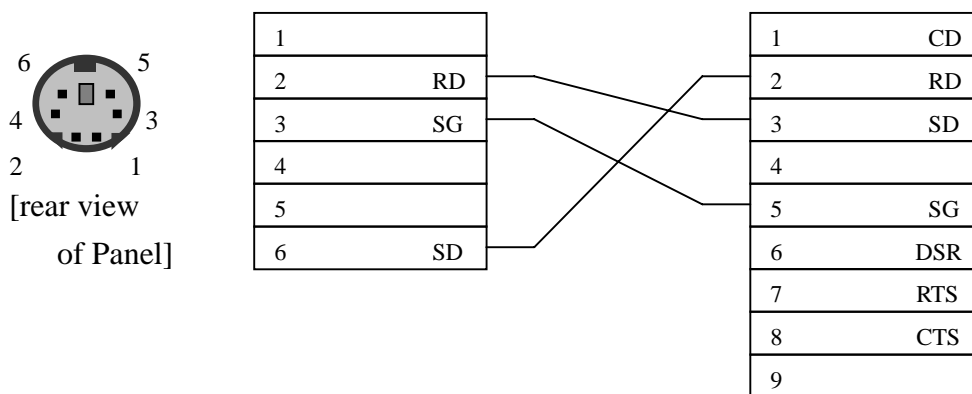

(2) Connection between Panel's 6pin port and PC's 25pin port

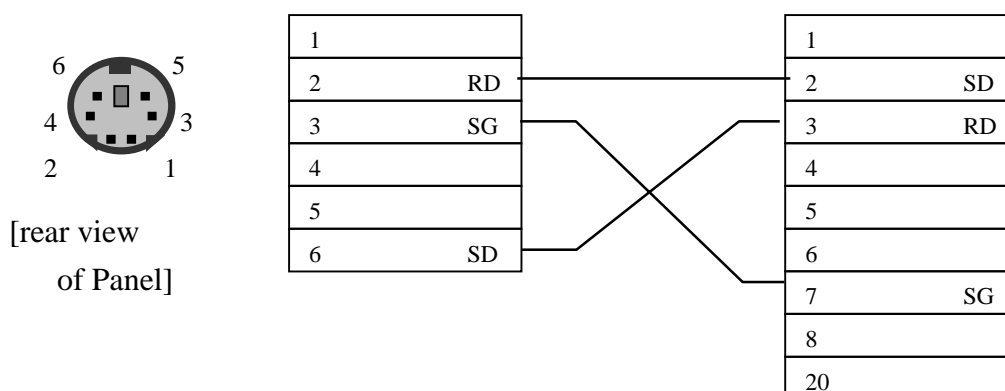

Chapter 2 . Installation

Requirements to install software are as follows

Item	Operational Standards
PC	Above IBM PC AT Compatible Recommended above Celeron 233
Memory	Above 64Mbyte, Recommended above 128Mbyte
FDD	One 3.5 inch drive
HDD	Recommended above 40Mbyte -Not the total size of Hard Disk
Serial Port	More than one Serial Communication port (For data communication)
Graphic Adapter and Monitor	Above SVGA(800*600) 16bit colors Recommended above 1024*768
Key board	Windows compatible Keyboard
Mouse	Windows compatible Mouse
Printer	Windows compatible Printer
Recommended O.S Environment	Above Windows 95/98/Me/NT/2k/XP

 **Note** : S/W may not operate under non-standard environment which is different with above specified 'Operational Standard'

2 . 1 Contents of Package

- Touch Panel
- User's Manual
- Install CD
- * Communication cable is 'Option'

2 . 2 Installation


Installation process is same with Windows 95/98/Me/NT 4.0/2000/XP

To install this S/W, run 'Install CD' on Windows.


Installation CD has self-extraction setup file("VxxxEng.exe"). This could be changed

by new upgrade version)


- (1) Insert Install CD into CD-ROM Drive.
- (2) Asked whether you agree on 'software License'. Click 'Yes' and move to next process.
- (3) A dialog box appears, it shows 'Destination Folder' to install.
To install in a different folder, click Browse and select other folder.
To stop installation, click 'Cancel'.
Click 'Next' to continue.

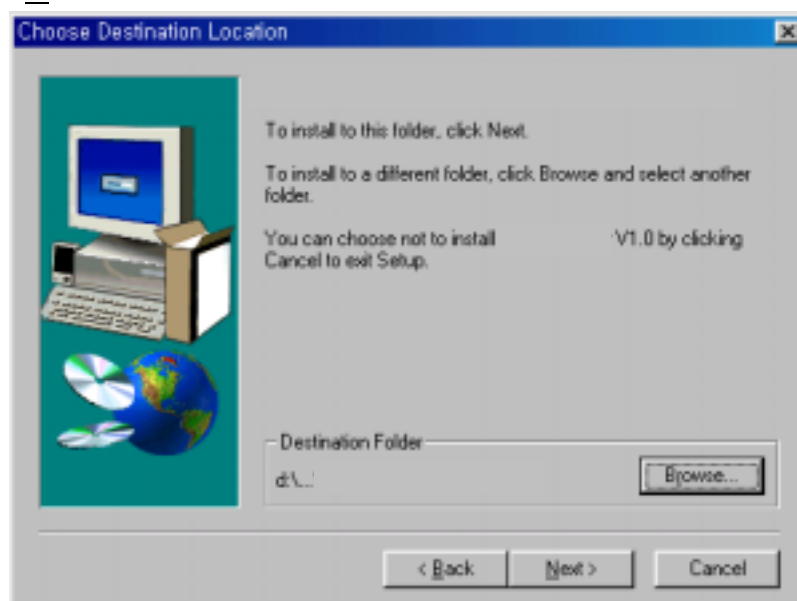

- (4) Select program folder. You may select other one from the 'Existing Folders' or make new folder.

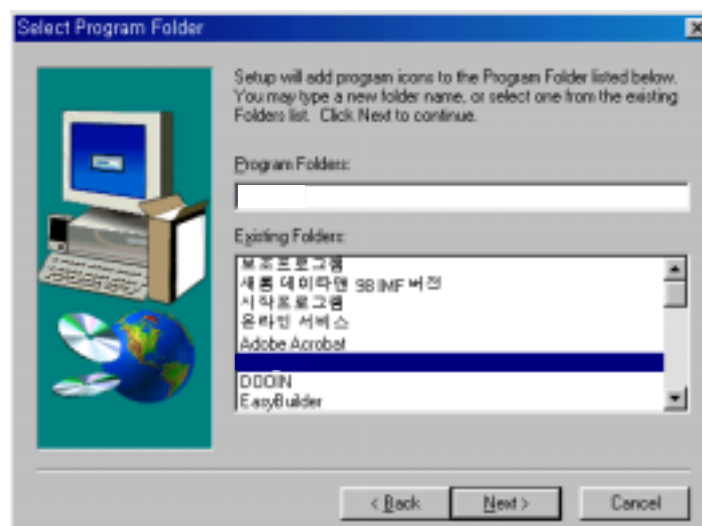

(5) It starts copying files from CD to computer.

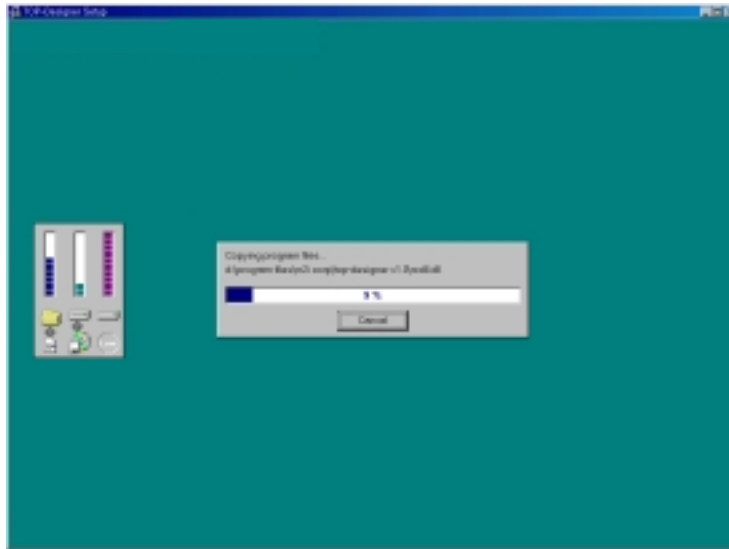

(6) Click 'Finish' to finish installation.

(7) After completion of installation, The program group and icon are created on program group.

(8) Browsing the installed folder, The folders(OS, Demo, Bitmap, lib-xxx6, lib-xxx3, lib-xxxC) can be seen. OS folder has the firmware of most proper version. Demo folder has demo project files by model. Lib-xxxx folders have libraries for model. Bitmap folder has bitmap files used in touch or lamp tag.

Chapter 3 . Basic Directions

Click 'Start' button on active desktop.

Select 'Program' menu and run this software. It is easy to click icon on active desktop.

3.1 Basic Functions


'Screen Edit, Message Edit, Alarm Edit, Simulation, etc' are available simultaneously in main program.

Project file consists of 'Screen data, Message data, Alarm data, Image data, Logging & Recipe data' and project file is saved as just one file.

* Communication Function between PC and Panel

- O/S Program download
- Font Download
- Project file transmission
- Upload(Screen, Logging 1 & 2, Recipe, Alarm history)
- Simulation

3.2 Menu

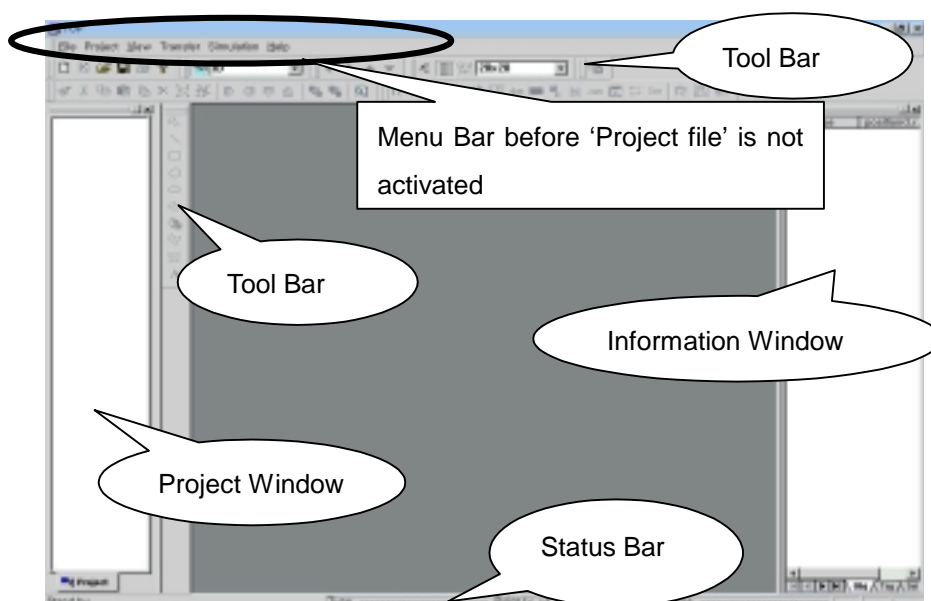


Project window appears on left, and information window on right.

On 'Project' menu,

- click 'Open Project' to open composed project
 - or click 'New Project' to create new project,
- and then all menu are activated.

This picture shows when new project file is created.

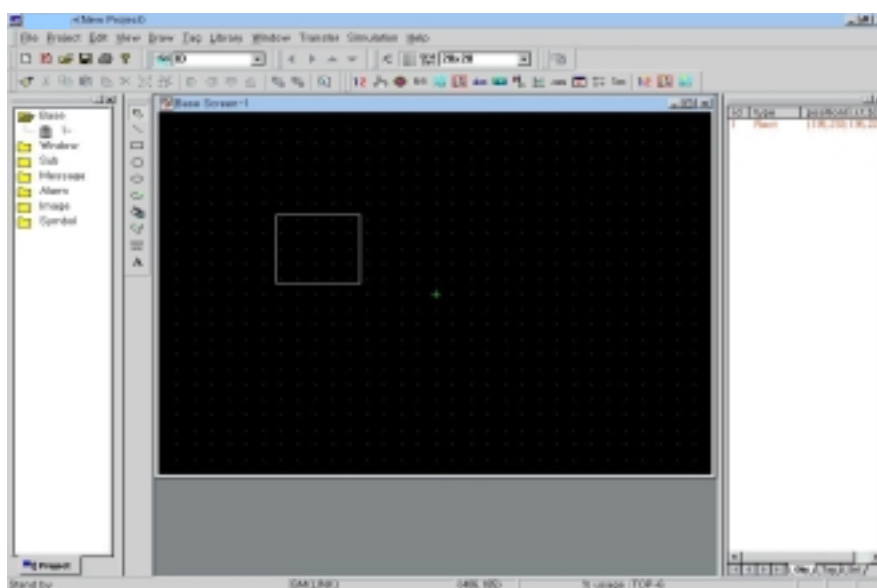

(1) Project window

Project Window has 'Base screen, Window screen, Sub-screen, Message, Alarm, Image, Symbol' folders by tree view. Whenever new item is created, the icon is added to the relevant folder.


1) Base screen

- Click 'New' on 'File' menu, and a dialog box appears.
- Click 'Base' radio button and register New Base Screen.


Or

- Click right mouse button on 'Base' screen icon or Base screen description on Project Window Screen, it comes to same result.

Then,

By writing screen number in dialog box and pushing 'OK', New Base Screen is activated, and icon () and screen number are created under


Base Screen folder.

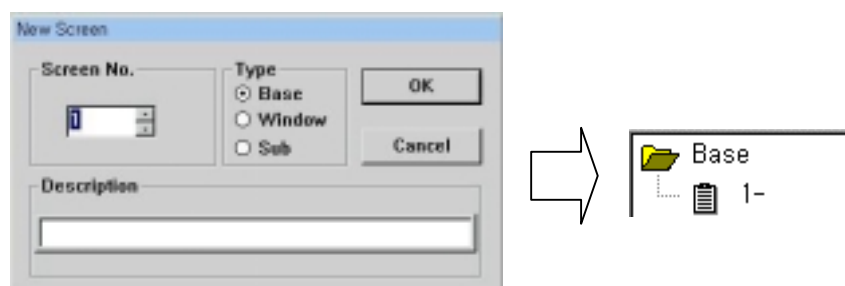


2) Window Screen

- Click 'New' on 'File' menu, and a dialog box appears.
 - Register new Window Screen by clicking 'Window' radio button
- Or
- Add new Window Screen by clicking right mouse button on Window Screen icon or Window Screen description.

Then


By writing screen number in dialog box and pushing 'OK', New Window Screen is activated, and icon () and screen number are created under Window Screen folder.

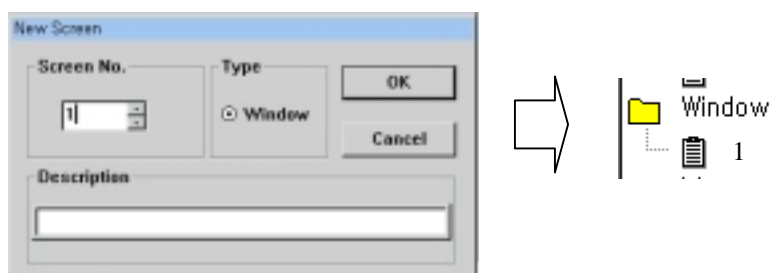


3) Sub Screen


- Click 'New' on 'File' menu, and a dialog box appears.
 - Register new Window Screen by clicking 'Sub' radio button
- Or
- Add new Sub Screen by clicking right mouse button on Sub Screen icon or Sub Screen description.

Then

By writing screen number in dialog box, New Sub Screen is activated, and icon () and screen number are created under Sub Screen folder.

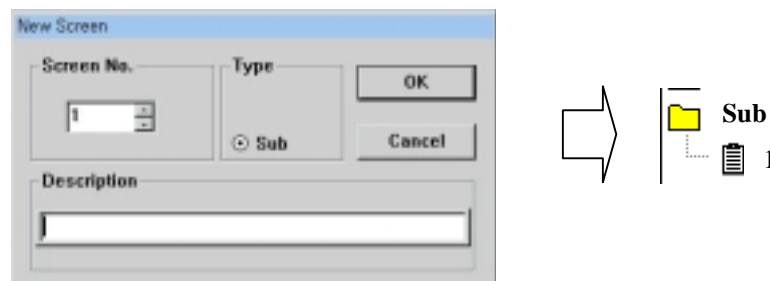

Sub Screen is used in relation to animation tag for animation effect,
And is registered in Base Screen for memory saving.

 **Note** : Just diagrams or bitmap are available in Sub screen, but any tag is not available.

4) Image

- Click right mouse button on 'Image' folder or description and select 'Add' menu.

Or

- Select 'Bitmap-Add' on 'File' menu.


Then, New Image is created.

It is possible to create image file by editing any bitmap file in 'Paintbrush' or other bitmap editor or 'IconMaker'.

Bitmap size is limited as a multiple of 16. But A(Advanced) series model have no limitation in size.

And for A series model, 256 colors are available.

- Double-click on created Image icon, the Image is registered and appears on screen,
- Move to proper position and drop it.

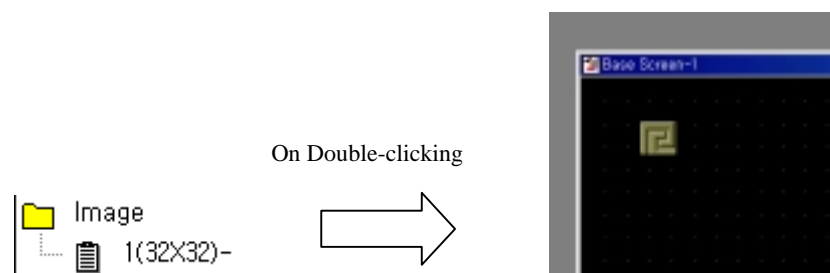

5) Symbol

- Click right mouse button on 'Symbol' (folder icon) folder icon or description and select 'Add' menu.

Or

- Select 'Bitmap-Add' on 'File' menu.

Then, New Symbol is created.


It is possible to create Symbol by editing any bitmap file in 'Paintbrush' or other bitmap editor or 'Icon Maker'.

*Bitmap size is limited as multiple of 16 and can't exceed 96*96 size.*

And only mono(black and white) is available.

Saving bitmap file, save the file as mono bitmap form.


- Double-click on created Symbol icon, the Symbol appears on screen,
- Move to proper position and drop it.

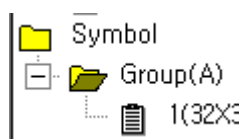

6) Pop up(Context) Menu


Click right mouse button on folder () or sub-item ()

It shows 'Allow Docking' & ' Hide' menu.

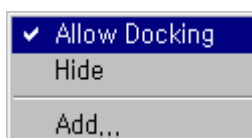


Allow Docking

- Checked : Project Window or Information Window can be attached to the main frame
- Not checked : Project Window or Information Window can not be attached to the main frame. So it allows float Project Window or Information Window.

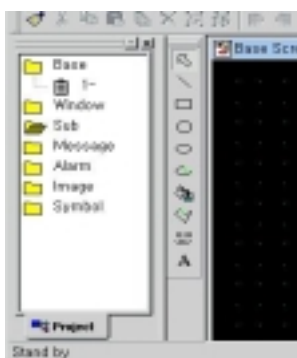


[Docking]

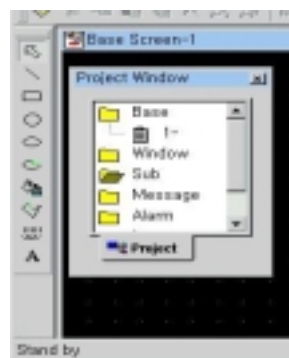



[Floating]

Hide : Hides Project Window


Delete : Deletes the Screen.

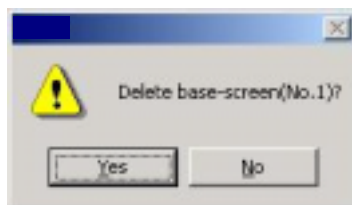

Renumber : Changes screen number.

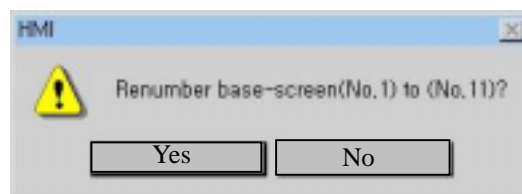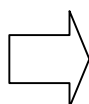

Modify Description : Modifies or changes description.

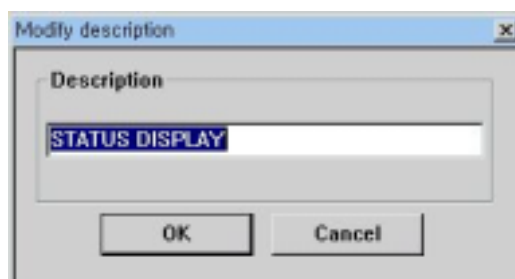


(2) Information Window

Information Window shows the list of Diagrams, Tags which are registered on the active Screen. And it is possible to select any object in Information Window. Click any object, the object's state turn into selection mode, that is, the object's edge turns white point.

Information Window consists of 3 tabs, 'Diagram', 'Tag', 'Selected'

- 1) **Diagram** : Shows created diagrams as like Images, Symbols, other diagrams on the current screen.
- 2) **Tag** : Shows created tags on the current screen.
- 3) **Selected** : Shows selected object(s) on the current screen.

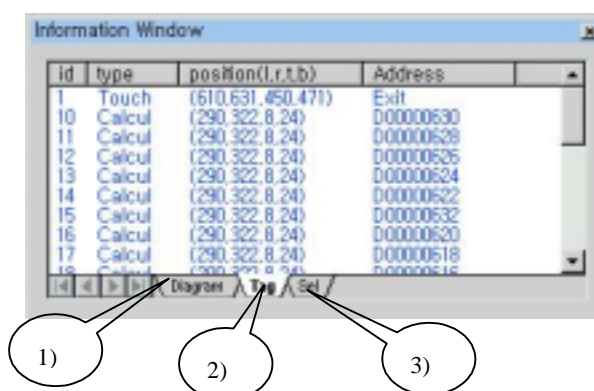

3.3 Tool Bar

Tool bars and the description ;

Tool	Description	Tool	Description
	New Project		Numeric Tag
	Delete File		Touch Tag
	Open Project		Lamp Tag
	Save Project		Clock Tag
	Print Project		Character Tag
	S/W's Information		Message Tag
	Move left 1 dot		Alarm Tag
	Move right 1 dot		Key-indication Tag
	Move up 1 dot		Bar Graph Tag
	Move down 1 dot		Trend Graph Tag
	Snap to Grid		Communication Tag
	Toggle Grid		Window Tag
	Grid Setup		Calculation Tag
	Re-draw		Symbol Tag
	Cut		ExNumeric Tag
	Copy		ExMessage Tag
	Paste		ExString Tag
	Multi Copy		Select mode
	Delete Object		Draw Line
	Group		Draw Rectangle
	Release Group		Draw Circle
	Align Left		Draw Ellipse
	Align Right		Draw Arc/Pie/Chord
	Align Top		Fill Color
	Align Bottom		Draw Poly-line/Polygon
	Bring to Front		Draw Scale
	Send to Back		Edit Text
	Find Address		Transfer Project File
	ExGraph2 Tag		X-Y chart Tag
	Find an address		Lock/Unlock


* Tool bar will increase according to addition of function.

3.4 Menu


3.4.1 File

File menu,

- Initial-run state : When no screen is activated

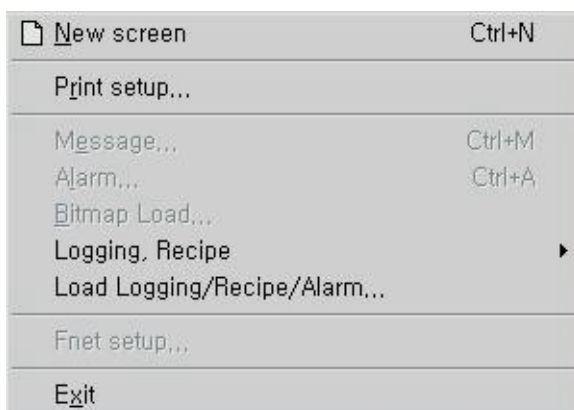


- When at least one screen is already activated

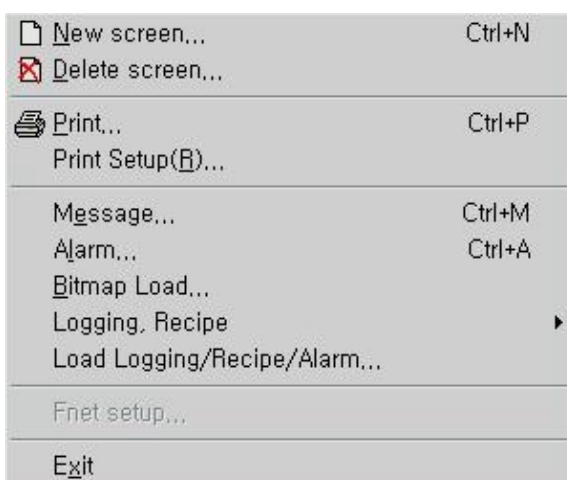


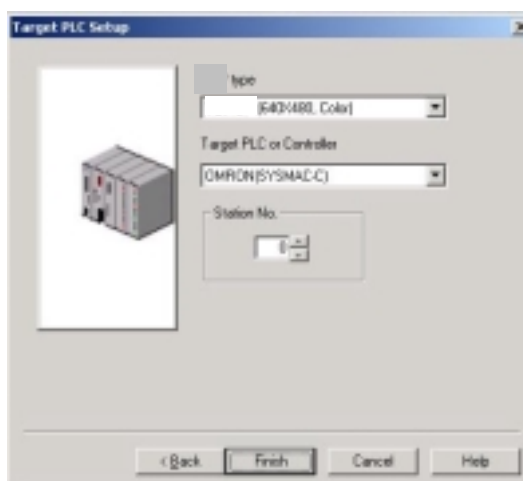
(1) New

Creates new screen - Base Screen, Window Screen , Sub Screen.

- Click 'New', then a dialog box appears,

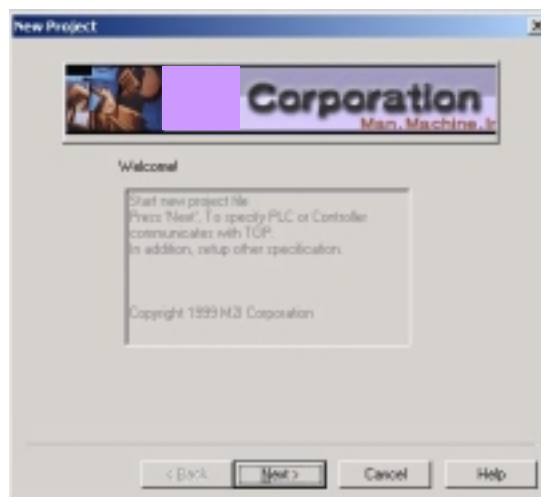

- Click 'Next' 
- Determine the type of main unit, Controller type, Station Number, and Communication Option type of controller.




- Click 'Finish' to confirm or 'Cancel' to cancel.

[Controller Type]


- PLC TYPE: LG:GM(LINK)
- PLC TYPE: LG:Master-K [80,200,300,1000]S(LINK)
- PLC TYPE: Melsec UC24(LINK)
- PLC TYPE: Melsec C24(LINK)
- PLC TYPE: LG:GM(LOADER)
- PLC TYPE: LG:Master-K [80,200,300,1000]S(LOADER)
- PLC TYPE: LG:Master-K [10,30,60,100]S(LOADER)
- PLC TYPE: LG:Master-K [10]S1(LOADER)
- PLC TYPE: LG:Master-K [60,200]H(LOADER)
- PLC TYPE: OMRON(SYSMAC-C)
- PLC TYPE: Fuji:MICREX-F(LINK)
- PLC TYPE: Melsec M2N,M3N(LOADER)
- PLC TYPE: Melsec M2A,M3A(LOADER)
- PLC TYPE: Melsec M2U,M3U(LOADER)
- PLC TYPE: Melsec AnS,AOJ2H(LOADER)
- PLC TYPE: Melsec MOJ2(LOADER)
- PLC TYPE: Melsec QnA(LOADER)
- PLC TYPE: Melsec FX(LOADER)
- PLC TYPE: Modicon(MODBUS)
- PLC TYPE: Melsec FX(LINK)
- PLC TYPE: AB SLC500[5/30,04] (loader)
- PLC TYPE: AB PLC-5 (loader)
- PLC TYPE: Siemens S5-3964R (link)
- PLC TYPE: Siemens S7-MPI (loader)
- PLC TYPE: GE Fanuc 90-30[SNP-X, SNP] (loader)
- PLC TYPE: Yaskawa Prolog-8 (loader)
- PLC TYPE: Yaskawa MP-920
- PLC TYPE: Yaskawa CP-9200SH(CP-217)
- PLC TYPE: RTU AE5000(RTU)
- PLC TYPE: Compumotor SX Indexer/Driver
- PLC TYPE: Toshiba PROSEC-T
- PLC TYPE: Fara-N (link)
- PLC TYPE: Fara-N70/700 pro (link)
- PLC TYPE: Fara-N (loader)

- PLC TYPE: SPC (loader)
- PLC TYPE: LG Inverter
- PLC TYPE: LG PLC, Inverter
- PLC TYPE: LG Servo FCS-5000
- PLC TYPE: Compile Technology Tiny
- PLC TYPE: LG:Master-K500,1000(LINK)
- PLC TYPE: LG:Master-K[10,30,60,100]S(LINK)
- PLC TYPE: LG:Master-K10S1(LINK)
- PLC TYPE: Koyo DL-205/305/405
- PLC TYPE: SLAVE(extension)
- PLC TYPE: Delta DVP-ES
- PLC TYPE: Dupline GTI50
- PLC TYPE: SAIA PCD Series


- A dialog box appears, determine 'Screen number', 'Screen type' – Base Screen, Window Screen, Sub Screen -, and write 'Description'

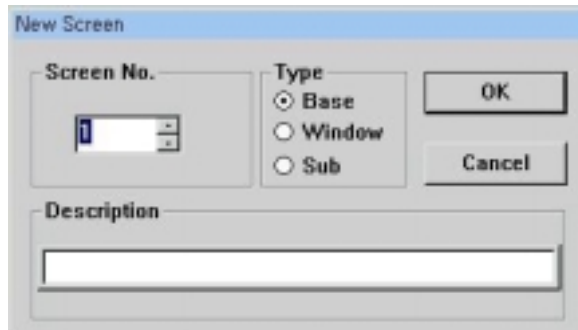

- If the screen number is same with already created screen, an error message appears,

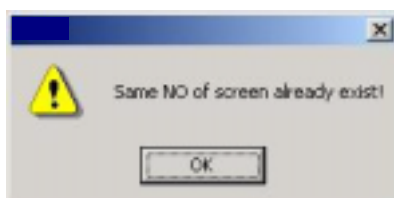

- A selected screen(Base/Window/Sub) is activated.

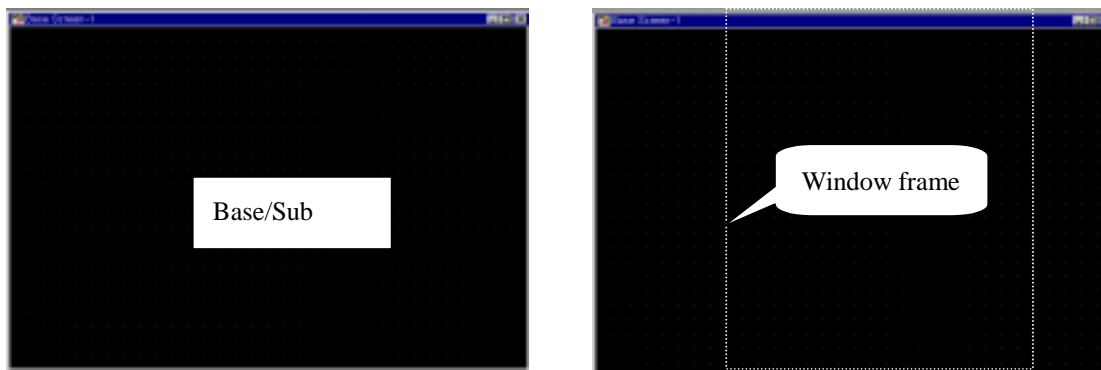

* Base Screen :

- Creates base screen which would be main screen in Panel.

* Window Screen :


- Creates pop-up window which would be used in Panel.
- Edits screen and registers 'Window Tag' in Base screen in Panel.
- Should edit screen within white-dotted line area, which the area will be real size of pop-up window in Panel's screen. So, tags out of this white-dotted area are not available.
- Adjust the white-dotted line area at a moderate size(Or use 'Auto-sizing win frame' function).
- Window Screen is to activate pop-up some window by touching, or by certain determined condition

* Sub Screen :

- Creates pop-up screen which has diagrams or images except tags.
- Creates animation effect by displaying several Sub Screens continuously


(2) Delete

Deletes 'Base / Window / Sub Screen' which is already created.

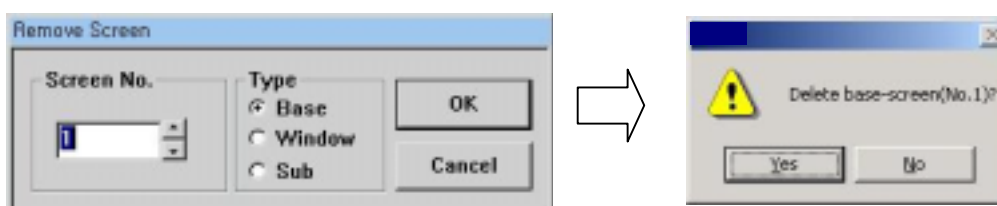


(3) Print

Prints edited screen.

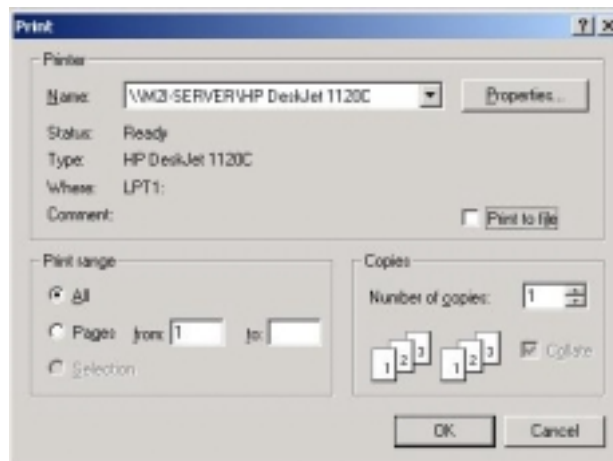


(4) Printer Setup

Sets up printer name and other factors.

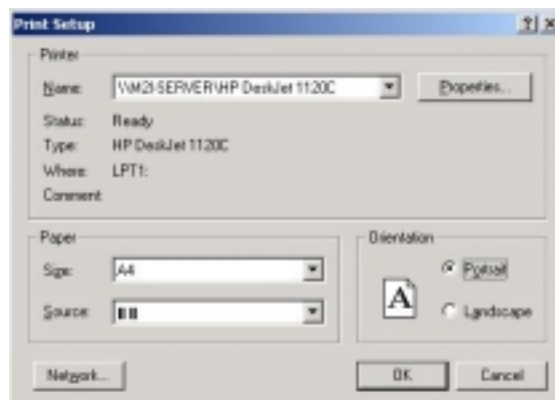


Defines print option in 'Information' tab.

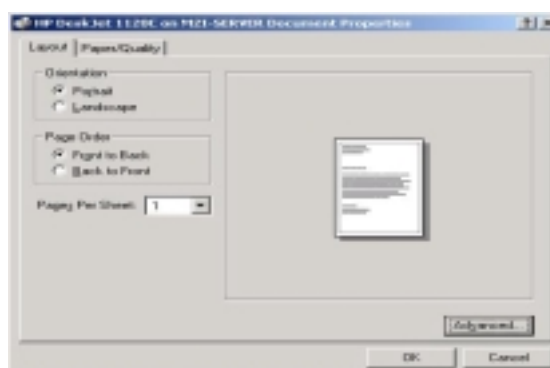

(5) Message File

Edits 'Message File'.

Refer to Chapter 6, 'Creating Message File' for more detail information.

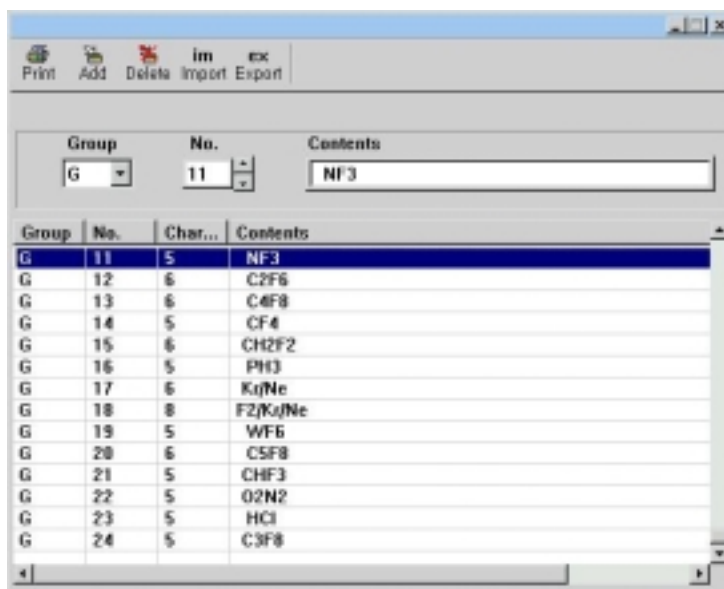


(6) Alarm File

Edits 'Alarm File'.

It looks same with Message File, but there is another factor, bit address, which is used on condition of occurring Alarm.


Refer to Chapter 6, 'Creating Alarm File' for more detail information.

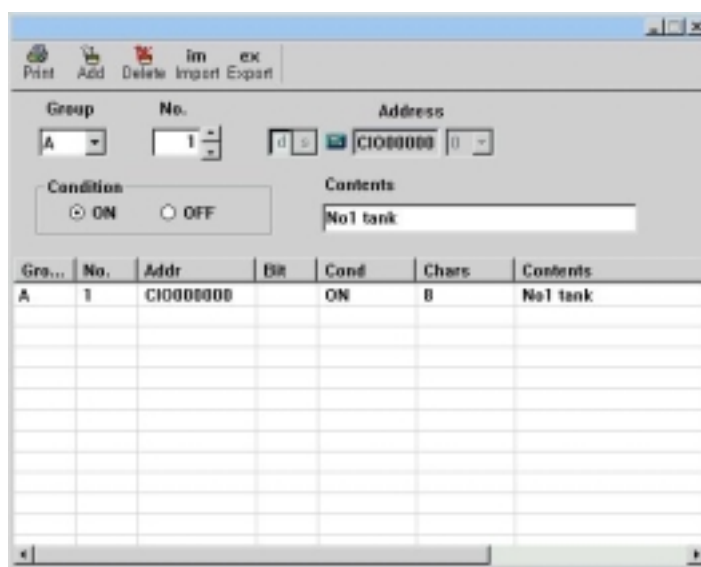

(7) Open Bitmap

Opens bitmap file and creates Symbol or Image.

Select path and number, and click 'OK'

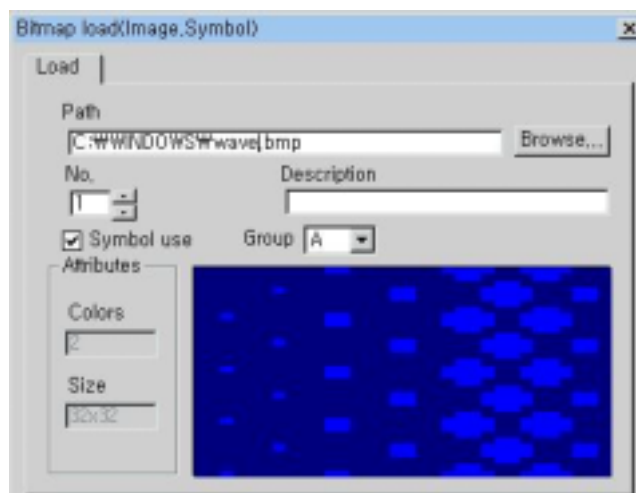


(8) Logging, Recipe

1) Logging

A function to save external controller device's data or system buffer's data inner memory(SRAM) on fixed logging condition and time interval. Individually you can use from logging1 to logging8.

It is possible to print logging data or upload them to PC.

 **Note** : Should assign memory before setup.

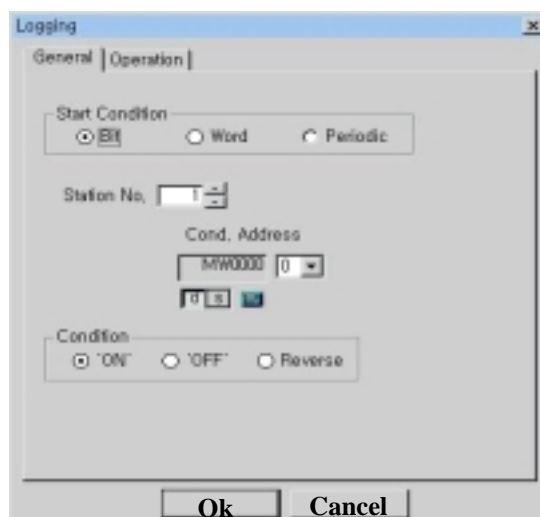


2) Recipe

A function to save parameter data in inner memory(SRAM) in order to operate controller or this panel to transmit relevant data block to working area(controller or system buffer) on fixed transmission condition .

to upload parameter data to PC

Refer to Chapter 4. for detail information about 'Logging and Recipe'.

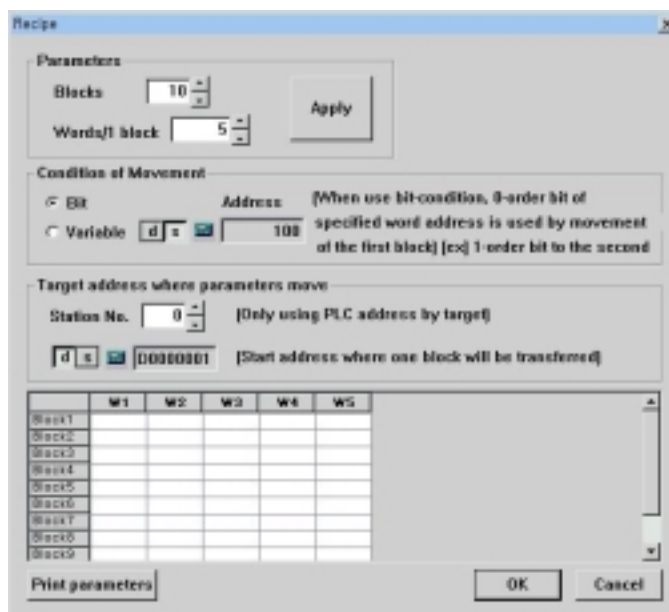


(9) Open Logging / Recipe / Alarm history

Opens Logging data file, Recipe data file or alarm history file.


(10) Exit

Click 'Exit' to end.

Asked whether to save working project or not.

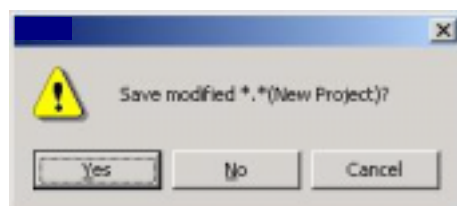

3.4.2 Project

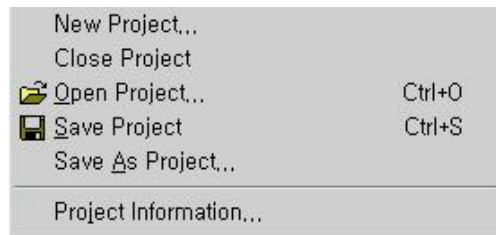

(1) New Project


Creates new project.

To create another new project file, save current project file on editing.

Process to create New Project is same with Chapter 3.4.1 (1) 'New'

(2) Close Project

Saves and closes edited project file. Without saving project, below dialog box appears.

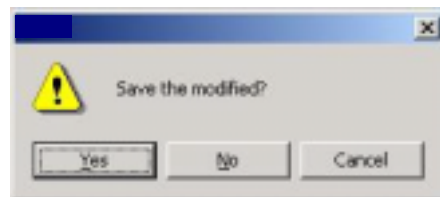

(3) Open Project

Opens a file which is already saved.

(4) Save Project

Saves edited current Project File

(5) Save as...

Saves Project File as different file name.

(6) Project Information

Shows the Project File's information as follows,

The screenshot shows the 'Project Information' dialog box with the following settings and callouts:


- type:** A dropdown menu.
- Target PLC or Controller:** 'Modicon (MODBUS)' with a checkbox for 'with Fnet'.
- Comm Type:** Radio buttons for 'RTU' (selected) and 'ASCII'.
- Station No.:** A numeric input field set to '0'.
- Interval of auto-saving:** A numeric input field set to '30' minutes.
- Comm. option(Advanced):** Checkboxes for 'Write priority is highest' (unchecked) and 'Bit write separately' (checked).
- Block of system buffer using:** A numeric input field set to '0 - 1023'.
- Enlargement when printing:** A percentage input field set to '100%'.
- Toggle color when capturing:** A checkbox labeled 'Use' (unchecked).
- Extended memory card:** A checkbox labeled 'Use memory card' (unchecked).

Callouts provide the following explanations:

- Left callout:** "Whenever times up, Automatically this project file will be saved."
- Top-right callout:** "Displays the type of main unit, target PLC, redundant communication information and Station No."
- Middle-right callout:** "Advanced option. Default is, 'Write priority is highest' is uncheck, 'Bit write separately' is check."
- Bottom-right callout:** "Enlargement of printing is possible among 50%, 100%, 200%."
- Bottom-left callout:** "Checking this box makes screen capture toggle the color(white to black, black to white) for saving Ink of printer."

(7) Recent opened files

Shows maximum 4 files' name and paths which are opened recently.

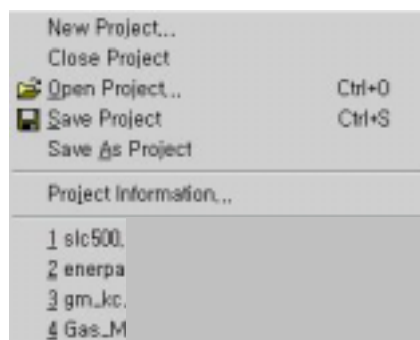

3.4.3 Edit



(1) Undo

Cancels operation that performed before (up to 10 times)

(2) Cut

Cuts the object-item or tag.

(3) Copy

Copies object-item or tag to clipboard.

(4) Multi Copy

Multi-copies as many as setting value.

Click multi-copy, a dialog box appears, write row and column number and interval.

* Address increases one by one automatically (For Numeric tag and Key display tag).

(5) Paste

Pastes copied object or tag from clipboard to screen.

(6) Delete


Deletes selected object or tag.

(7) Movement by Coordinates

Moves object as long as assigned X, Y axis' value.

In case of 'Absolute', datum point is (0,0) of screen.


In case of 'Relative', datum point is the left-upper point of selected object.

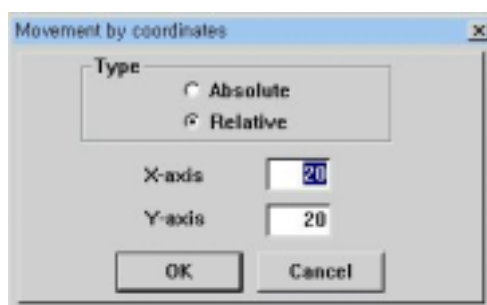

(8) Group

Groups the selected objects or tags.

It is possible to group with some items, to group with other group, to edit any group. etc

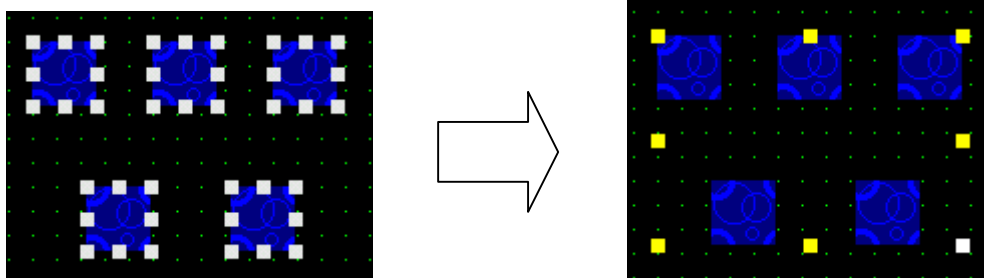**(9) Ungroup**

Ungroups the selected group into sub group or single objects.

(10) Edit Property

Changes selected object's color and pattern.

(11) Re-draw


Re-draws screen on editing.

(12) Select All

Selects all objects and tags on screen.

(13) Snap to Grid



Click 'Snap to Grid' and drag the object by mouse, selected object or tag moves grid by grid. Or not, selected object or tag moves freely.

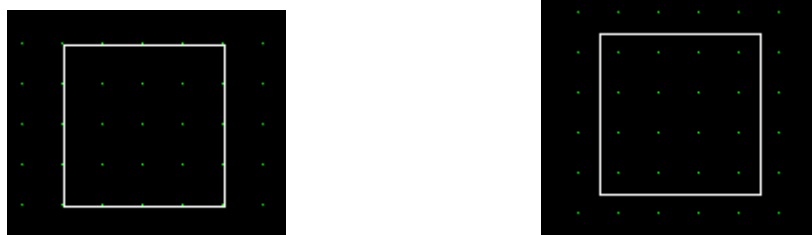

(14) Grid Setup


Setups grid interval along X and Y axis.

Click 'Grid Setup', and write grid interval X and Y axis'.

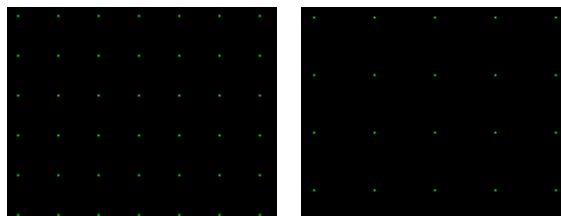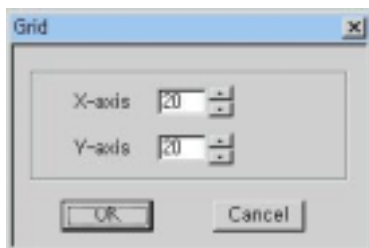

(15) Bring to Front

Brings one object to front of other objects.

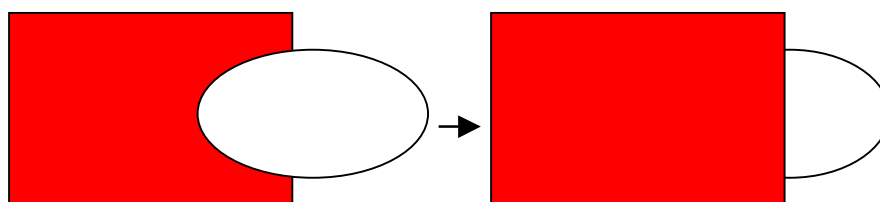

(16) Send to Back

Sends one object to back of other objects


(17) Align Left, Right, Up, Down

Align Left : lines up selected objects on Left of screen

Align Right : lines up selected objects on Right of screen

Align Top : lines up selected objects on Top side of screen

Align Bottom : lines up selected objects on Bottom side of screen

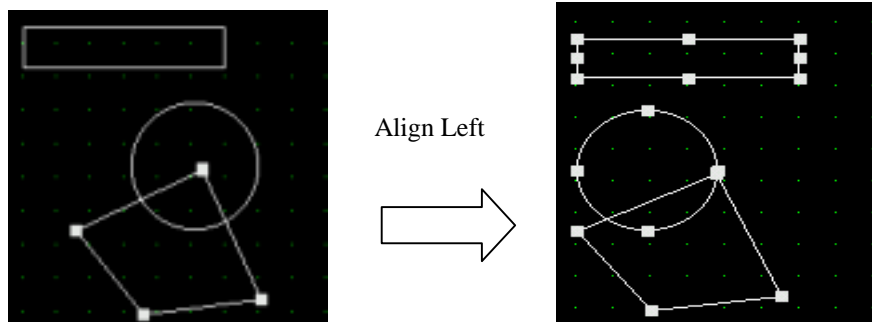

(18) Auto-Sizing Window frame

When a object is diverged from Window screen, Window area size is adjusted automatically on basis of the biggest object's size.

(19) Find Address

- To find any address of external controller, write controller's address and click 'Find'
- The list shows relevant screen number and tag number having the address.
- Double click the tag number, relevant tag dialog appears.
- Click the tag number, the tag is selected.

(20) Screen Capture



- Activate any screen to capture
- Click 'Screen Capture'
- Paste on 'PaintBrush' etc

3.4.4 View**(1) Status Bar**


Shows or hides Status Bar

(2) Grid On/Off

Shows or hides Grid

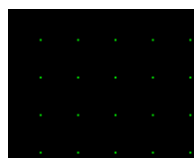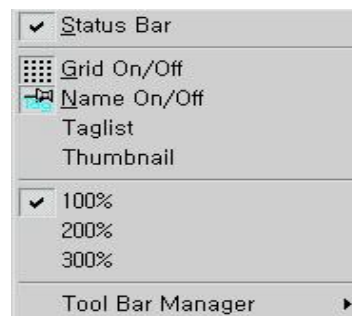

Checked

 


Unchecked

(3) Name On/Off


Shows or hides tag's name



Checked

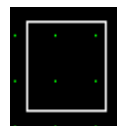


Unchecked

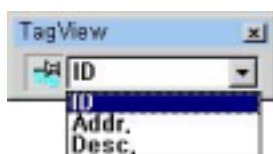

- Type of tag name
 - 1) ID : Identical No. such like *T0002*
 - 2) Addr. : Address of PLC such like *D0002*
 - 3) Desc. : Comments input by user

(4) Tag List

Arranges used tags on current screen in such a way that it is easy to choose and modify any tag.

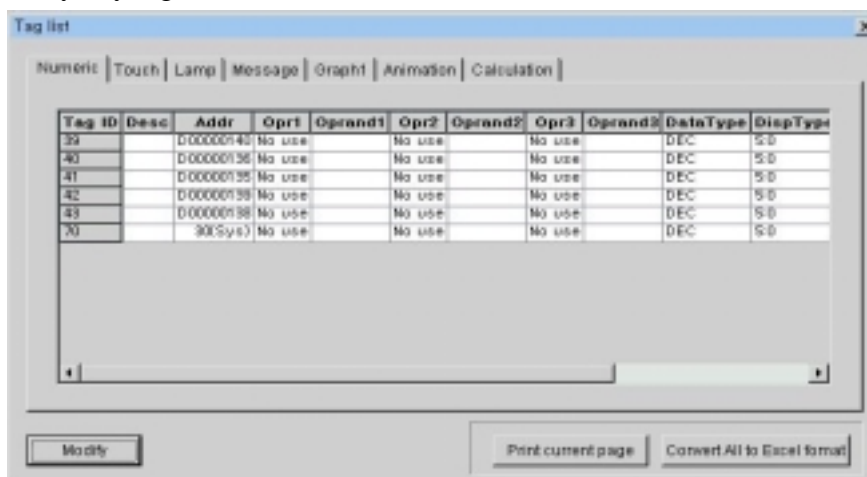

- Modify : Modifies selected tag by clicking a row and edits properties on dialog box.
- Convert into Excel : Converts all of tag list into Excel file format

(5) Thumbnail

Shows all screens simply on one screen.

Select one screen and click 'Open', the screen is activated.



(6) Screen Zoom (100%, 200%, 300%)


Magnifies screen 100%, 200%, 300%.

(7) Toolbar Manager

Toolbar : Select any Toolbar to show or hide.

Extended : Enables to change Toolbar's style

3.4.5 Draw

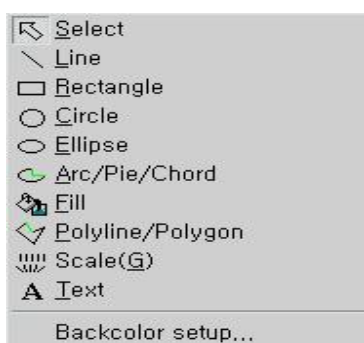

Draws lines or diagrams.

It is easier to use toolbars.

Refer to Chapter 5. ' Drawing'

3.4.6 Tag




Selects tags and edits screen by use of tags to communicate with controller.

It is easier to use toolbar.

Refer to Chapter 7. 'Tag'


3.4.7 Library

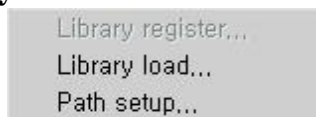


(1) Register Library

Registers any grouped objects -Tags, Diagrams – as a library.

- Group selected objects
- Click 'Register Library' menu
- Write 'Library Number', 'Group Name', 'Description' and 'Path'.

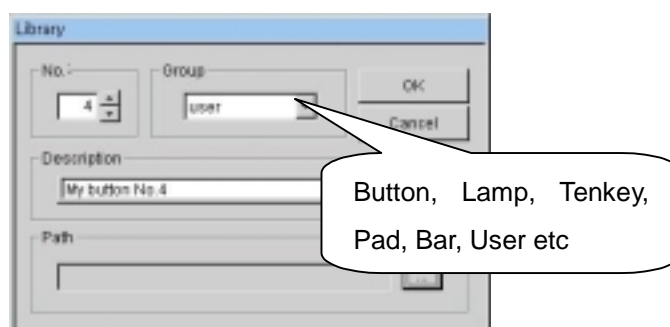

- Click 'OK'

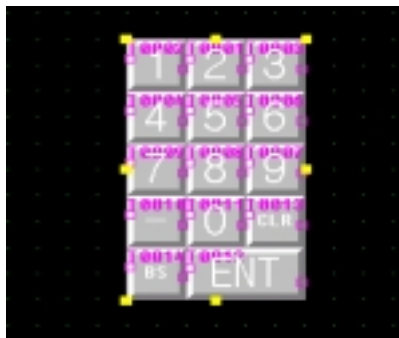

(2) Open Library

Opens registered Library.

- Click 'Open Library' menu. Library table appears.
- Select 'Type' of Library, each type's libraries are listed.
- Choose one of them to load on screen.
 - Double click on any library
 - or click 'Load'
- Then, the selected library is registered on screen
- To delete any library, select one and click 'Delete'
- To view real size on screen, click 'Real View'
- PgUp/PgDown : Moves to previous page or to next page
- View All :


Click right mouse button on any library.

Click 'View All'

It shows full shape of selected library




(3) Path

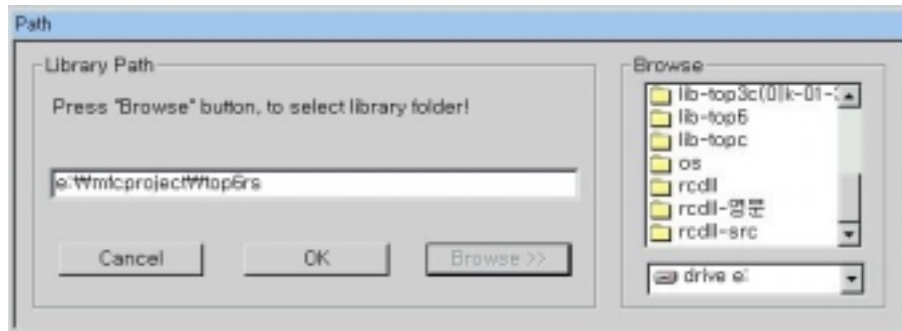


Searches any library folder directly

3.4.8 Window

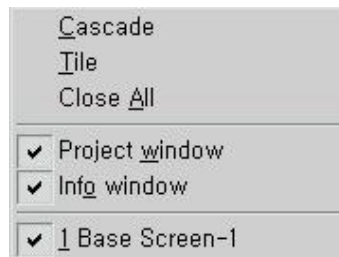

(1) Cascade

Rearranges opened windows in a cascade style.

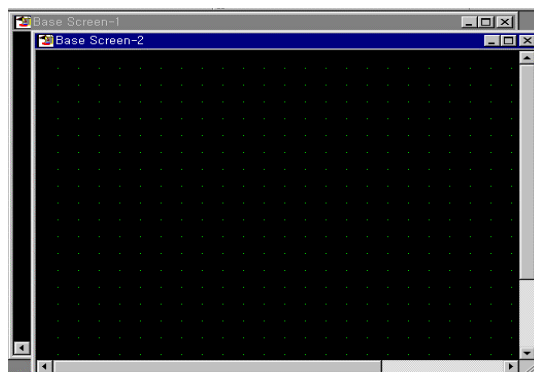

(2) Tile

Rearranges opened windows in a tile style.

**(3) Close all**

Closes all opened windows.

(4) Project Window


Shows or hides 'Project Window'

(5) Information Window

Shows or hides 'Information Window'

(6) Current opened screens

Lists screens which are opened currently.

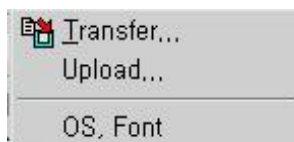3.4.9 Transmission**(1) Transfer**

Transfers programmed project file in PC to panel.

After saving the project, 'Transfer' menu is available.

Transmission of screens, logging, parameters, alarms, upload information etc together to panel(main body).

Refer to Chapter 9, 'Download & Upload'

(2) O/S, Font Transmit


Transfers O/S, Font from PC to panel(main body).

3.4.1 0 Simulation

By use of PC, simulates external device's operation after transmission project file to main unit.

Refer to Chapter 8, 'Simulation' for detail information.

3.4.1 1 Help

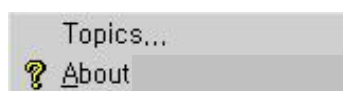


(1) Topics

Shows detail description about directions of S/W.

(2) About ...

Shows information of S/W– Version and etc –

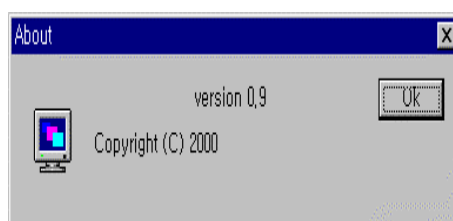

Chapter 4 . Logging & Recipe

4 . 1 Memory Assignment

Before setting Logging and Recipe, assign memory,

Determine what to use among 'logging 1', 'logging2', ... 'logging8' and 'recipe'
Assign Memory for each items.



Without assignment memory, next error message appears,



4 . 2 Logging

'Logging' is to save external device's data or inner data of main body semi-permanently in SRAM at regular time-interval or event.

At the same time, logging time(YY/MM/DD/hh/mm) is also saved.

Logged data can be uploaded to PC anytime.


Logged data is preserved unless user downloads new project file, or O.S data.

On the condition that panel(Main body)'s power is off over 1 days, to preserve the logged data, there should be backup battery. When power is off over 1days without

backup battery, logged data and special buffer related to logging may be deleted.

4.3 Logging Conditions

After assignment memory, select 'Logging 1'

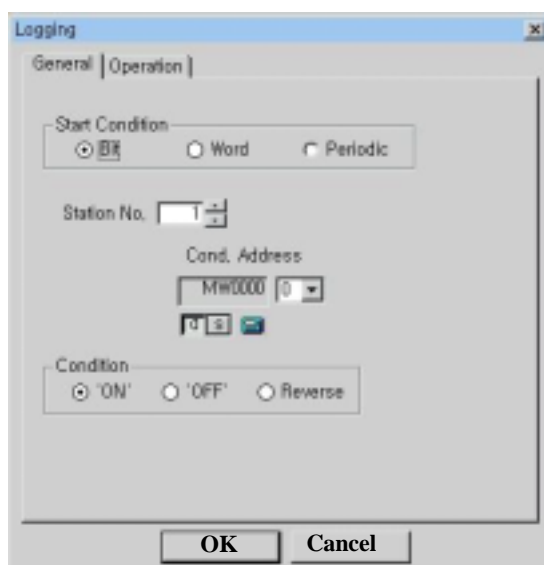

4.3.1 General

(1) Bit (condition)

- 1) On : As device's address changes from 'off' to 'On' , it starts logging.
- 2) Off : As address changes from 'on' to 'Off' , it starts logging.
- 3) Reverse : As address value reverse – 'from On to Off' or 'from Off to On', it starts logging.

(2) Word (condition)

Starts logging when device's value is within determined range.


If address value is out of the range and back to the range, it restarts logging.

If both range is same(namely Min. and Max. is same value), the only equivalent condition makes starting of logging.

(3) Time (condition)

Starts logging on every setting day/time (hour/minute)

4.3.2 Operation

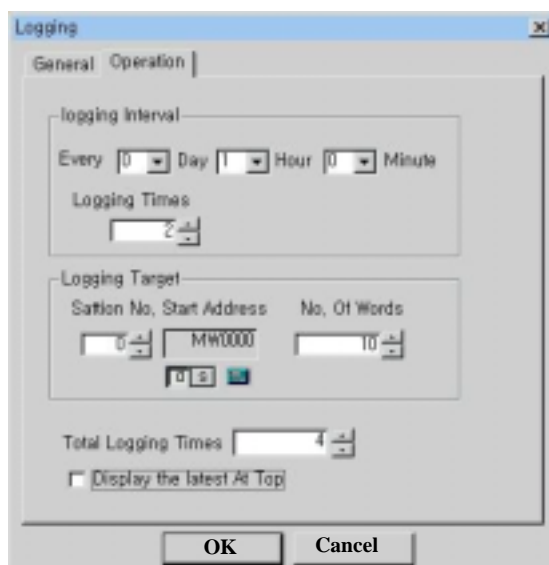

(1) **Logging Interval** : Determine logging time interval.

(2) **Logging Times** : Determine number of times of logging

For example, to log from 8:00 in the morning with 1hour interval till 17:00 of the same day,

Logging interval is '0 Day 1 Hour 0 Minute' and Logging times is '10'.



Caution : On time condition, please set 'Logging Times' as more than 2.

(3) **Logging Target** : Determine external device's station number, address or inner system buffer, and word number to be logged at one time

(4) **Total Logging Times** : Determine total number of logging.


Total Logging Times is multiple of 'Logging Times'.

Total logging memory is not permitted to exceed assigned memory volume of Chap. 4.1

Total Logging memory = (Total Logging Times+1) X (Word Number+4)

['4' is to save logging time and '1' is for inner usage]

As total logging memory exceed assigned memory, next error message appears,

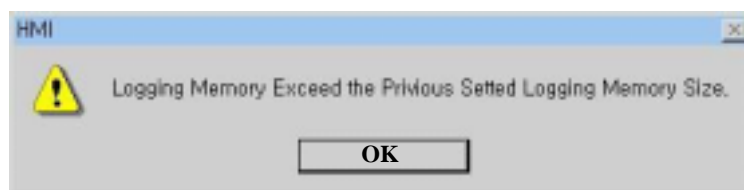

(5) Display the latest at top

- Checked : The last logged data is displayed on the top line.
- Not Checked : The last logged data is displayed on the bottom line

Note 1 : Power Failure

When power failure occurs under logging...

Logging 10 times from 8:00 AM everyday with 1 hour period, the power is off at 10:15 and then power is on again at 10:45.

: It logs at 8:00, 9:00, 10:00, 11:00,,17:00 normally. Because logging isn't occurred during power off, from 10:15 to 10:45.

The next day, the power is off from 11:45 to 12:15

: It logs at 8:00, 9:00, 10:00, 11:00, 13:00,.....,17:00, skipping 12:00.

Because power is off at 12:00. So, it logs 9 times, and the last logging is 'Null'. [* 'Null' data has no logging time.]

The third day, the power is on at 7:30, and off from 15:30 till next morning 7:00

: 8 loggings occur, the last two loggings are 'Null'.

Because it logs at 8:00, 9:00,.....,15:00.

The fourth day, the power restarts at 8:30, this day has no logging.

Because power is off at start time. That is, when power is off at the time of start condition, it is impossible to check start condition.

 **Note 2 : Special Buffer connected with data logging**

** _LOGED_ONE_1 : Logging #1, ... , _LOGED_ONE_8 : Logging #8

_LOGED_ONE_1 (one logging completed)

: As Logging #1 completes logging one time, buffer's value becomes '1'

_LOGED_ALL_1 (All logging completed)

: As Logging #1 completes all of loggings, buffer's value becomes '1'

_LOGED_CUR_BL_1 (Current Logged block number)

: Shows current logged block number of Logging #1

_LOGED_ALL_CLR_1 (Clear all logged data)

: If buffer's value is not '0', it clears all logged data of Logging #1 and restarts logging. After clears logged data, Firmware changes this special buffer's value to '0'

Logging #1 and Logging #2 ... Logging #8 *operate independently each other*,
It means they *do not affect each other*.

4.4 Examples of Logging


(1) Example 1 : On 'Bit' condition

Let's log 20words from MW0010, 10 times, total 100 times, with 1hour interval.

And displays the last logging data on the first line

1) Assign Memory for logging 1 : 32768words

Should be minimum $(100+1)*(20+4) = 2424$ words or higher.

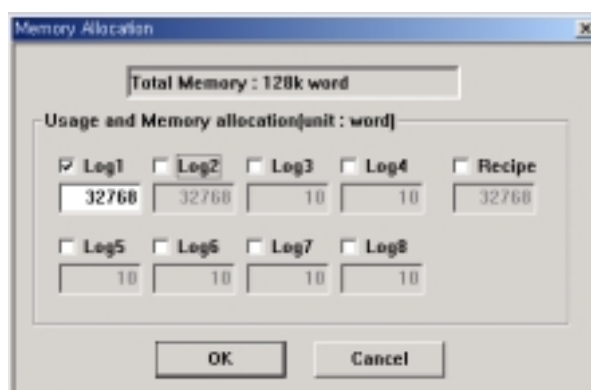


2) General

Start Condition : Bit

Station Number : 0

Address : MW0000's 0 bit(LSB : least significant bit)

Logging Condition : 'On' trigger

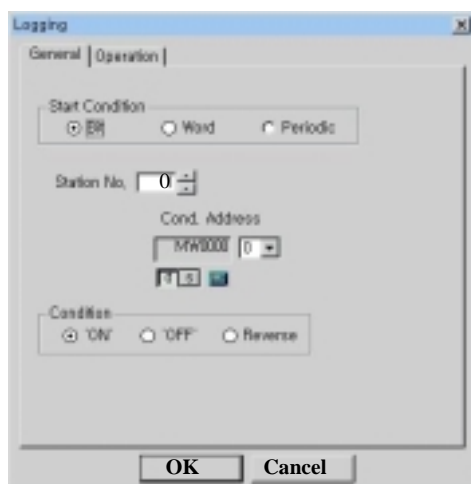

3) Operation

Logging Interval : 0 Day 1 Hour 0 Minute


Logging Times : 10

Logging Target : Station Number 0's MW0010

Word Number : 20

Total Logging Times : 100 times

Display the latest at top : Checked

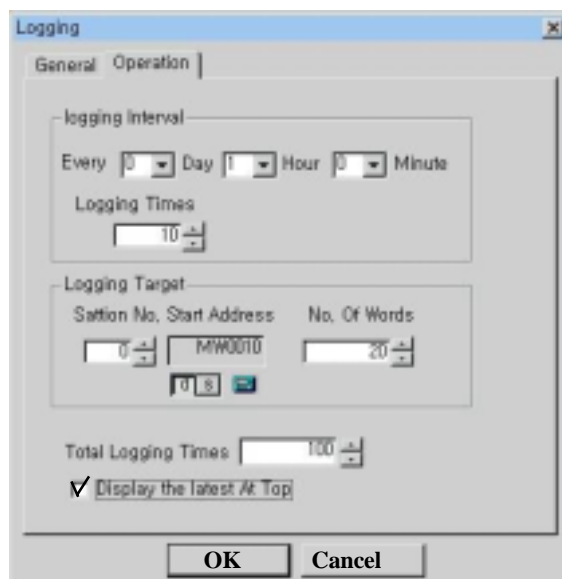

(2) Example 2 : On 'Time' condition

Let's log 20words from MW0010 of '0' station, 8 times from 8:00 AM everyday with 60 minutes period for 30days totally.

And display logging data in logged order.

1) Assign Memory for logging 2 : 32768 words


Should be minimum $(240+1)*(20+4)=5784$ words or higher.



2) General

Start Condition : Time

Start Period : Month, 0 Day / 8 Hour / 0 Minute

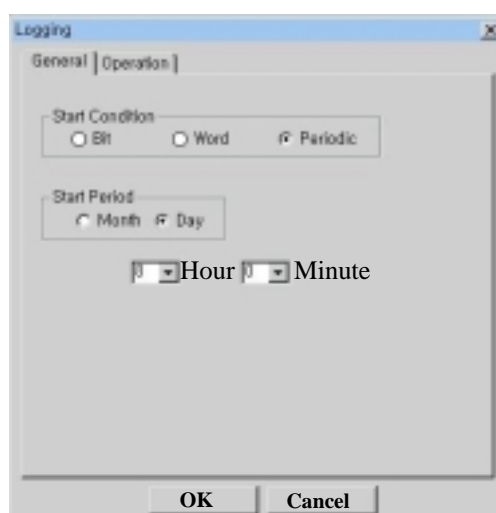

3) Operation

Logging Interval : 0 Day 1 Hour 0 Minute


Logging Times : 8

Logging Target : Station Number 0's MW10

Word Number : 20

Total Logging Times : 240

Display the latest at top : Not Checked

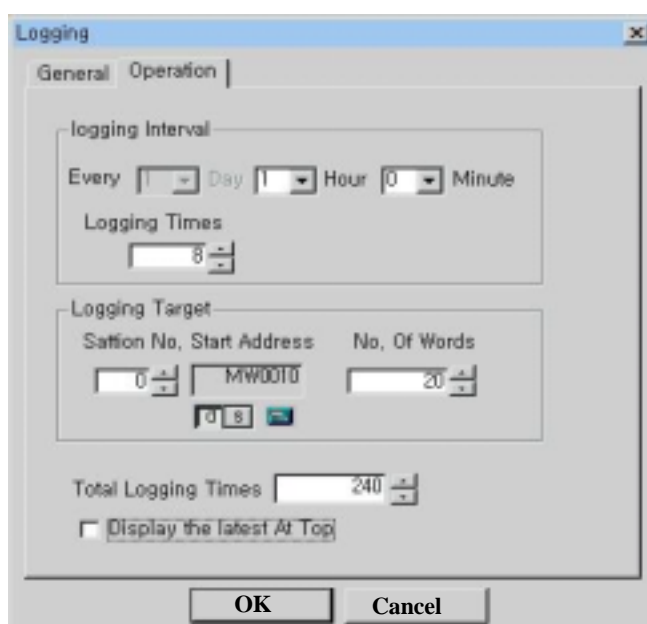

4.5 Recipe

Recipe is

saving parameter data, which panel or external device need, in panel(main body).
transmitting data block to working area(controller's address or inner system
buffer) on determined condition.

It is possible to upload data to PC or to print into printer.

panel uses parameters in SRAM.

Parameter data in SRAM are preserved unless modifying parameters, downloading
new project file or O.S.

On the condition that power is off over 1 days, to preserve the logged data, there

should be backup battery. When power is off over 1 days without backup battery, logged data and related special buffer may be deleted.

Likewise with logging, total word number is not permitted to exceed 'Assign memory'

Total Word Number = Word Number * Block number

As total memory exceed assigned memory, an error message appears.

The 'Recipe' dialog box contains the following fields and controls:

- Parameters:**
 - Blocks: 10
 - Words/1 block: 5
 - Apply button
- Condition of Movement:**
 - Bit (selected)
 - Variable: Variable
 - Address: W000000
 - Help text: [When use bit-condition, 0-order bit of specified word address is used by movement of the first block] [ex] 1-order bit to the second
- Target address where parameters move:**
 - Station No.: 0
 - Help text: (Only using PLC address by target)
 - Start address: W000000
 - Help text: (Start address where one block will be transferred)
- Table:**

	W0	W1	W2	W3	W4
Block1					
Block2					
Block3					
Block4					
Block5					
Block6					
Block7					
Block8					
Block9					
- Buttons:** Print parameters, Open parameter that was uploaded, OK, Cancel

4.5.1 Parameter

- (1) Block : Write block number
- (2) Words / 1 block : Write word number per 1 block
- (3) Click 'Apply', blocks and words are formed as many as determined numbers.

4.5.2 Transmission Condition

(1) Bit

From '0' bit of selected word (only word addr. possible) address, parameter transmission condition bit and block number make a one-to-one correspondence. As bit value changes from '0' to '1', the corresponding block's data are transmitted to working area. For example, bit '0' is changed from '0' to '1', block #1's data are transmitted to working area. *As same manner, bit '1' is triggered from '0' to '1', block #2's data are moved to working area.*



Caution :

In case that block number is not 16's multiple, should pay attention.
For example, if block number is 10, bit '10' ~ '15' are not used (0~9 bit used).
But, *never use address bit, '10' ~ '15'.*

(2) Variable

The value of selected word address becomes block's number directly.
If the value of address is '5', block #5's data are transmitted to working area.
And if the value of address is '0' or exceed 'total block number', the value is ignored. For example, when total block number is 10, if address value is '0' or '11' or '23' etc, no block data are transmitted.

(3) Target Address

Determine station number and working area address which parameter data are transmitted to.

(4) Table : Column is **word** and row is **block**.

(5) Print parameters : Prints current parameter table.

(6) Open parameter that was uploaded : After uploading recipe (parameter move), parameter file (*.RCP) is created. This function make that file (*.RCP) opened in order to use pre-described parameter.

 **Note : Special Buffer connected with parameter transmission(Recipe)**

_PARAM_DEFAULT-LD (parameter default load)

: If value is not '0', parameter table in flash memory is loaded to SRAM memory.

After completion of loading, clears buffer to '0'.

It is useful to initialize parameters that was described in S/W. Because '_PARAM_RESTORE' or '_PARAM_SAVE' is able to change the value of parameter in SRAM.

_PARAM_RESTORE (parameter restore)

: If value is not '0', current values of working area are restored in memory(SRAM) just before new parameter is loaded to the working area. This special buffer is used to save and reuse current parameter data later. That is, when the parameter in working area is more useful than that of SRAM, it is useful.

This buffer is not cleared automatically. Then if value is not '0', restoration proceeds until value of this buffer goes to '0'.

_PARAM_CUR_BLOCK (current block number) – *Read Only*

: This special buffer always has current block number on working.

_PARAM_SAVE (parameter default load) :

: If value is not '0', current values of working area are restored in memory(SRAM) just before new parameter is loaded to the working area.


This special buffer is used to save and reuse current parameter data later. After one restoration, clears buffer to '0' automatically.

4.6 Example of Recipe

To set 'Recipe',

- Assign memory sufficiently
- Set parameter table as 10 blocks and 4 words
- Set transmission condition as 'Variable' with 'MW0'condition address
- Set working area address on device as 'MW0010' of station number '2'
- Write parameter data

Total word = 10*4

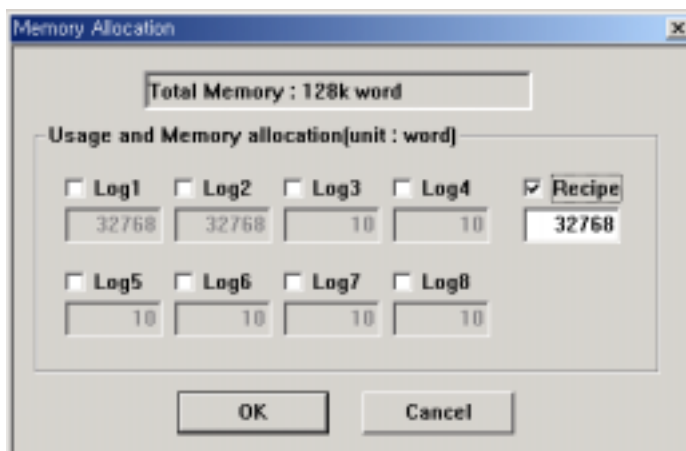

- Block Number : 10
- Word / 1 block : 4
- Transmission Condition : Variable
- Transmission Condition Address : MW0
- Target address : station 2, MW10
- Parameter table : as follows

